VOCANA® WPC Decking Installation Guide

WPC decking is designed for outdoor use with excellent durability and slip resistance.

Ground Preparation

- Ensure solid and level base
- Create slight slope for drainage
- Install joists with spacing 300–400 mm



Installation Steps


1 Fix Joists Securely

Attach joists to base with expansion space (5–7 mm from wall).



2 Install Starter Clips

Fix starter clips at the end of joists to hold first board.

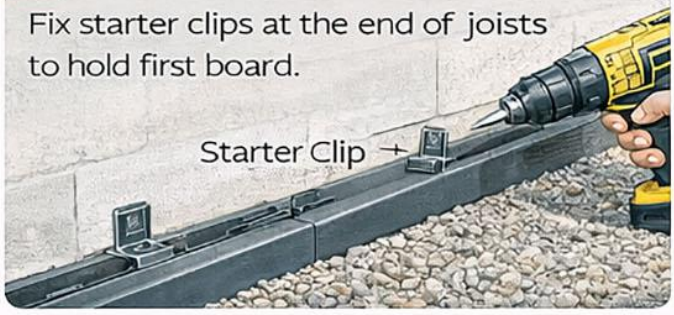

Installation Steps


1 Fix Joists Securely

Attach joists to base with expansion space (5–7 mm from wall).



3 Lay Decking Boards with Expansion Gaps

Click boards firmly and leave 5–7 mm gaps for expansion.

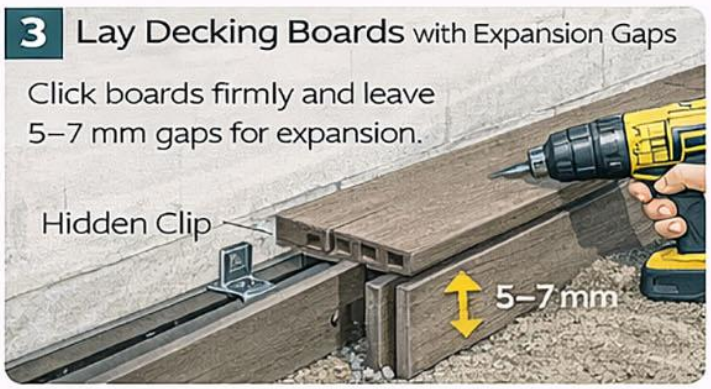

4 Install Edge Boards and Trims

Fix edge boards and install finishing



5 Install Edge Boards and Trims

Fix edge boards and install finishing trims.

